


Flat Roof Installation Guide

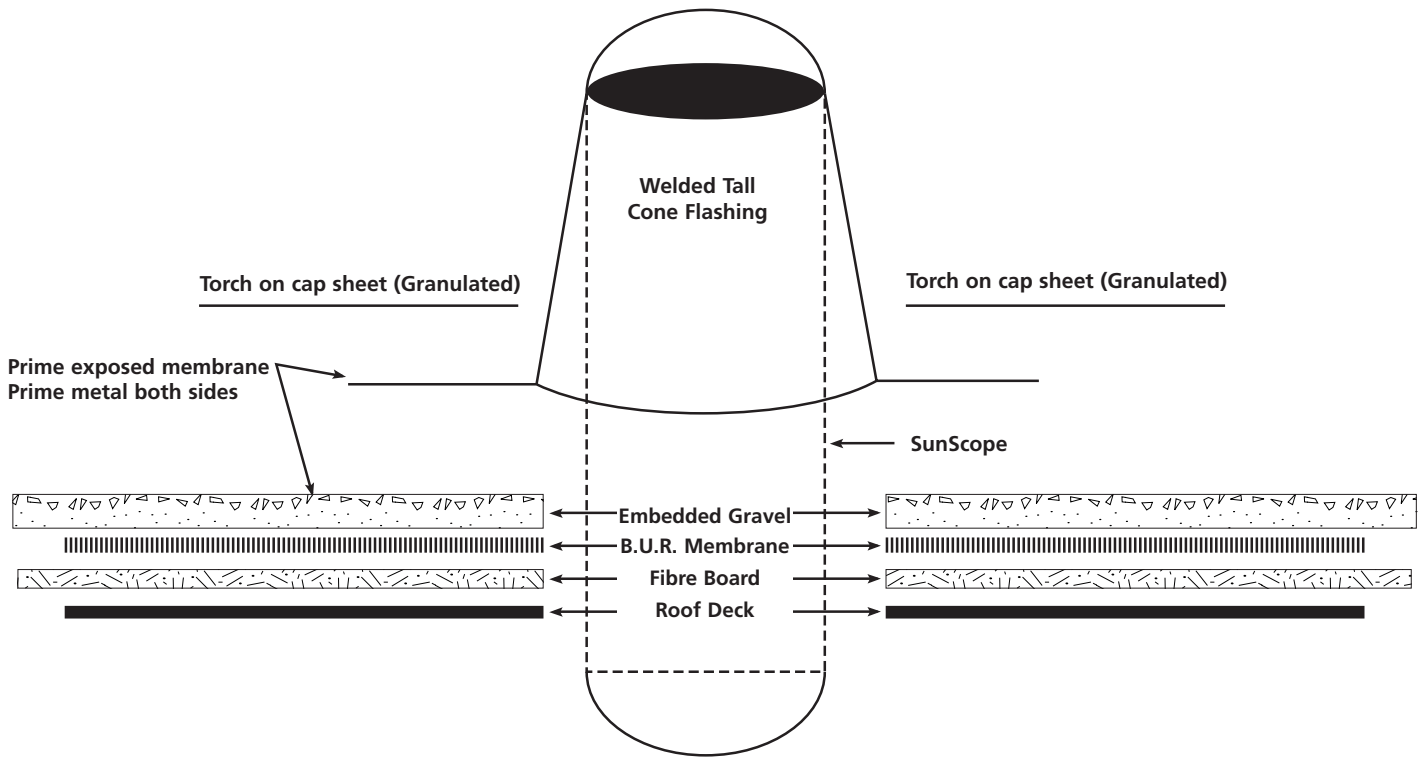

INSTRUCTIONS

STEP 1

Scrape back gravel down to smooth membrane at least 12" past flashing togs. Leave a 1" space between cap sheet and gravel.

STEP 2

Prime exposed membrane and both sides of flashing with asphalt roof primer. Let dry.

STEP 3

Embed flashing into plastic cement (Black jack) and fasten to roof deck.

STEP 4

Torch on; should flow out at all edges.

STEP 5

Trowel the 1" gap (between cap sheet and gravel) with plastic cement and embed with loose gravel.

STEP 6

Cover remaining cap sheet with loose gravel.